


FRONT

GRAIN DIRECTION FOR  
ZINTRA TIMBER SPECIES


[0.50in]  
12.70mm



SIDE

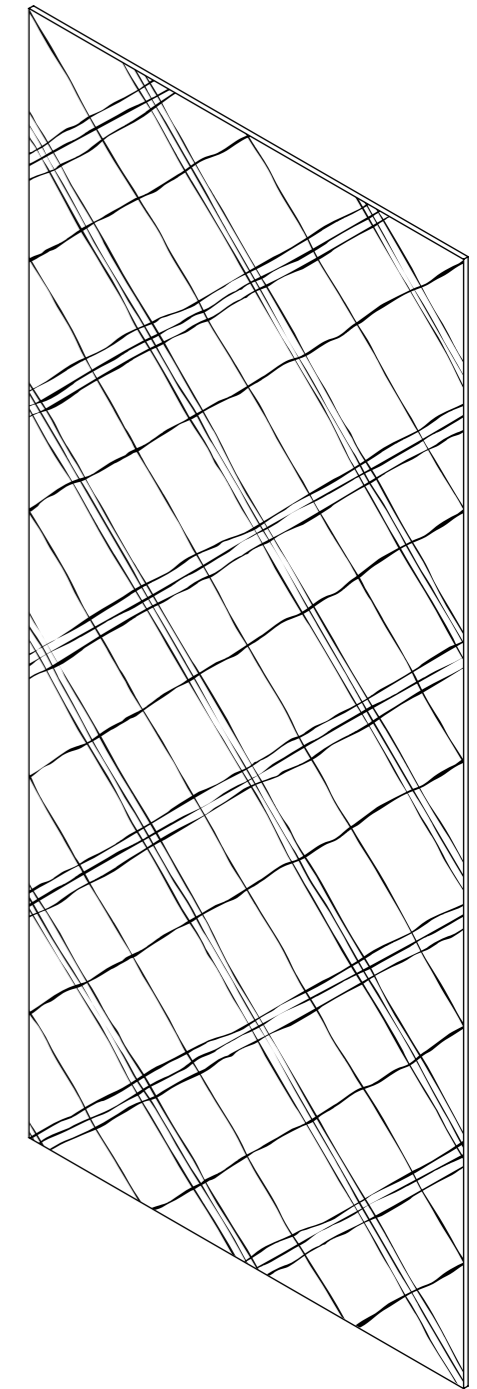

ISOMETRIC

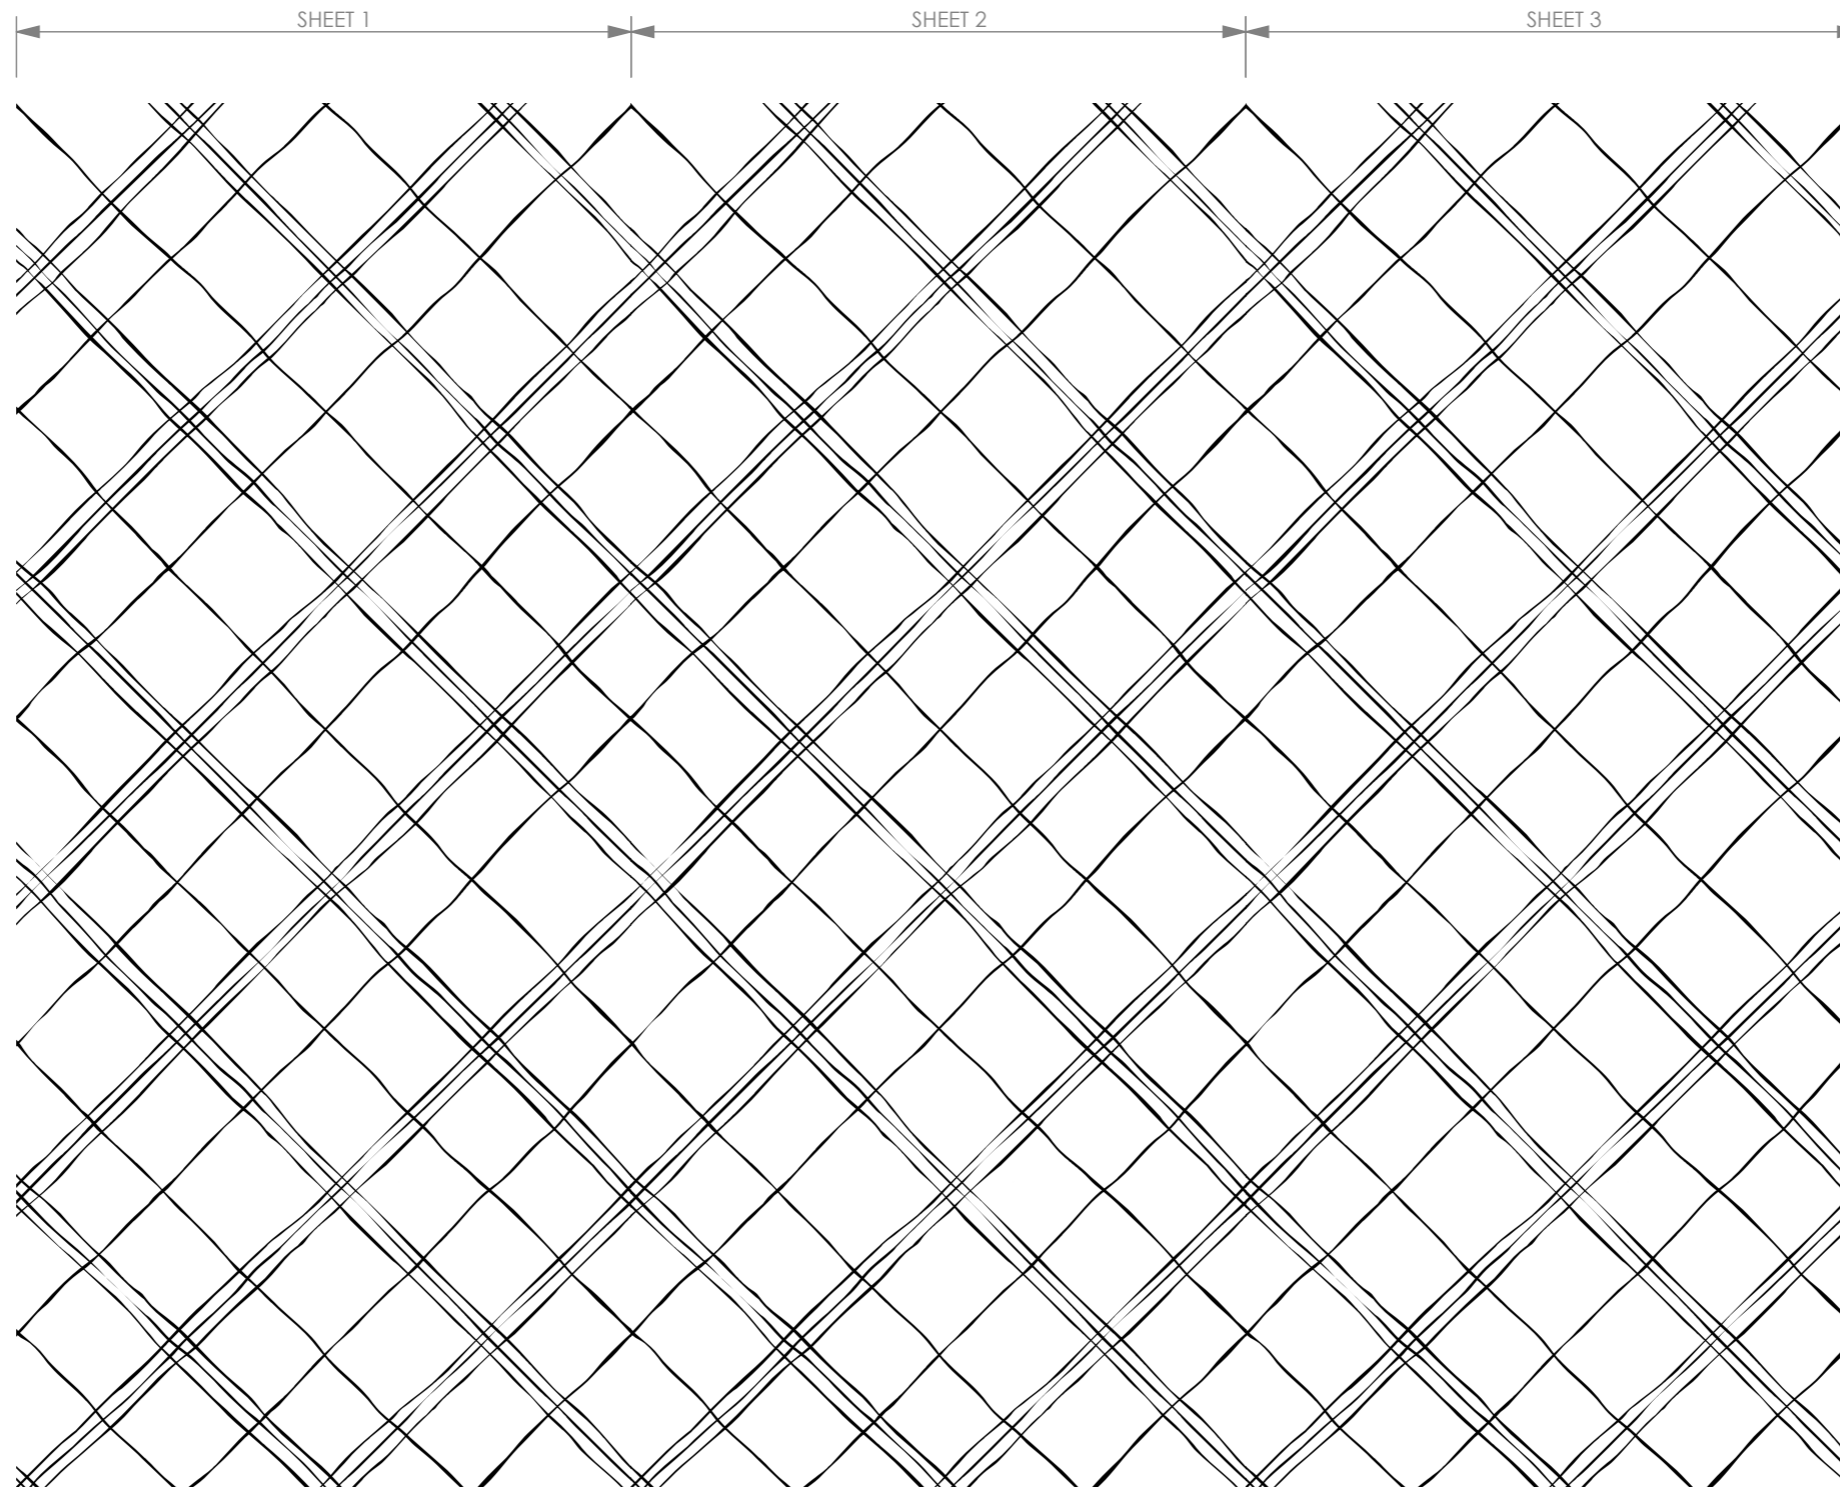

EXAMPLE OF MULTIPLE PANELS

**NOTE:**  
REFER TO INSTALLATION GUIDE  
ON HOW TO ADHERE PANELS  
TO WALL/ CEILING.